




Receiving and Unpacking

MGE™ Galaxy™ 3500 (3:3 and 3:1)

XR Battery Enclosure

380/400/415 V

208/220 V

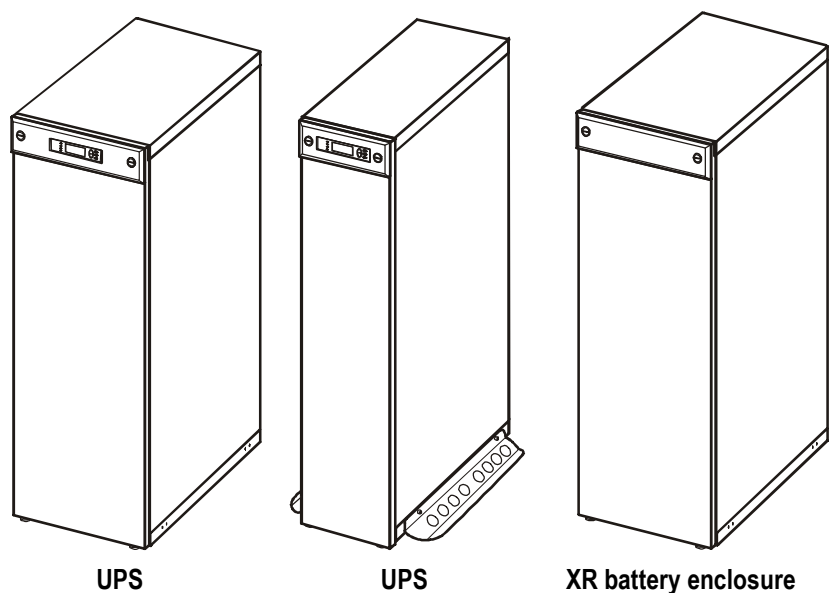

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS



Warning: Indicates a hazard, which, if not avoided could result in personal injury or damage to product or other property.



Warning: For safety reasons, only qualified personnel is allowed to remove the front panel and perform operation and maintenance behind it.

Shipping Weights and Dimensions

UPS net dimensions

Enclosure Net Dimensions	mm (in)
Height (identical for all UPS enclosure sizes)	1499 (59)
Depth (identical for all UPS enclosure sizes - exclusive of the conduit box)	838 (32.99)
Depth (identical for all UPS enclosure sizes - inclusive of the conduit box)	925 (36)
Enclosure width (2 sizes)	356 (14) and 523 (20.6)

UPS shipping weights

Galaxy 3500 (3:3)

208/220 V	kg	lbs	208/220 V	kg	lbs
G35T10KF1B2S	336	741	G35T10KF2B2S	427	941
G35T10KF1B4S	354	780	G35T10KF2B4S	446	983
G35T10KF3B4S	538	1186	G35T10KF4B4S	630	1389
G35T15KF2B2S	428	944	G35T15KF2B4S	446	983
G35T15KF3B4S	538	1186	G35T15KF4B4S	630	1389
G35T20KF2B4S	476	1049	G35T20KF3B4S	568	1252
G35T20KF4B4S	660	1455			
G35T30KF3B4S	568	1252	G35T30KF4B4S	660	1455

380/400/415 V	kg	lbs	380/400/415 V	kg	lbs
G35T10KH1B2S	245	540	G35T10KH2B2S	336	741
G35T10KH1B4S	382	842	G35T10KH2B4S	474	1045
G35T10KH3B4S	566	1248	G35T10KH4B4S	657	1448
G35T15KH2B2S	433	955	G35T15KH2B4S	474	1045
G35T15KH3B4S	566	1248	G35T15KH4B4S	657	1448
G35T20KH2B2S	433	955	G35T20KH2B4S	474	1045

380/400/415 V	kg	lbs	380/400/415 V	kg	lbs
G35T20KH3B4S	566	1248	G35T20KH4B4S	657	1448
G35T30KH3B4S	601	1325	G35T30KH4B4S	692	1526
G35T40KH4B4S	692	1526			

Galaxy 3500 (3:1)

220/230/240 V	kg	lbs	220/230/240 V	kg	lbs
G35T15K3I2B2S	428	944	G35T15K3I2B4S	505	1113
G35T15K3I3B4S	566	1248	G35T15K3I4B4S	686	1512
G35T20K3I2B2S	428	944	G35T20K3I2B4S	505	1113
G35T20K3I3B4S	566	1248	G35T20K3I4B4S	686	1512
G35T30K3I3B4S	566	1248	G35T30K3I4B4S	686	1512
G35T40K3I4B4S	686	1512			

XR battery enclosure weights

Part Nos.	kg	lbs	Part Nos.	kg	lbs
G35TXR2B6	418	922	G35TXR6B6*	807	1779
G35TBXR2B6	418	922	G35TBXR6B6*	807	1779

* The total weight of the XR battery enclosure including the separate battery package.

Receiving

External inspection. When the shipment arrives, inspect the shipping material for any signs of damage or mishandling. Do not attempt to install the system if damage is apparent. If any damage is noted, contact APC and file a damage claim with the shipping agency within 24 hours.

Compare the components of the shipment with the bill of lading. Report any missing items to the carrier and to APC immediately.

Verify that labelled units match the order confirmation.



Move to Installation Site



Use a pallet jack or a forklift for components over 54 kg (120 lb).



Note: After the unit has been removed from the pallet, move it only by rolling it on the casters.



Caution: Ensure that the floor is level. The enclosure cannot be installed on a floor that is not level.

Space considerations




Note: Allow for enough working space behind the enclosure for electrical work to be carried out (e.g. if you want to connect an XR Battery Enclosure at a later stage).




Note: Where conduit is required, we recommend use of flexible conduit.

10-20 kVA - narrow tower.

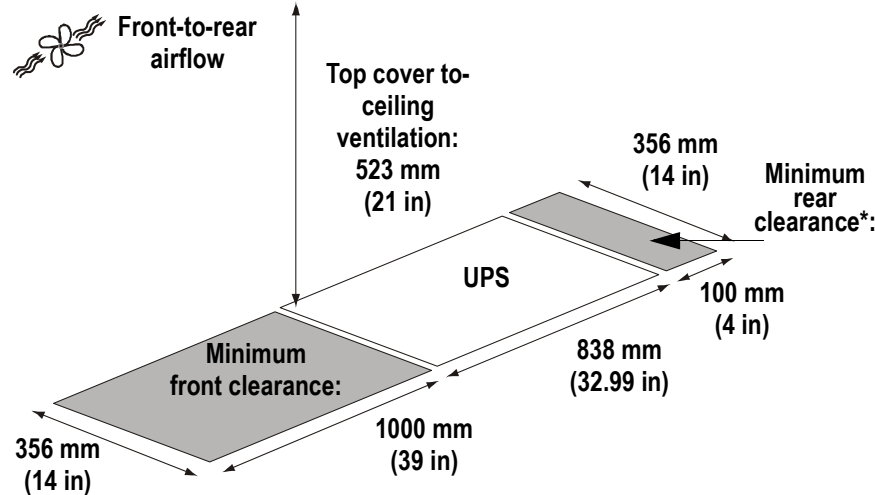

30-40 kVA - wide tower.

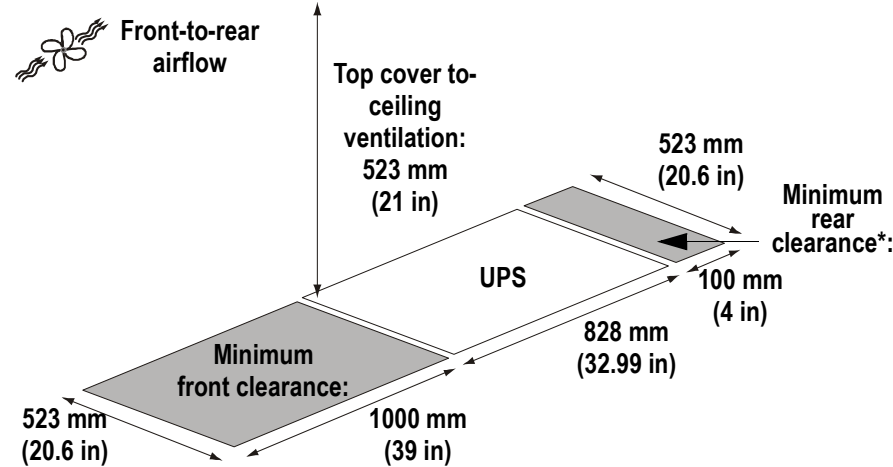

* All physical installations must comply with local standards.

Unpacking

Unpack the enclosures



Caution: Do not unpack the units before the time of the installation.



Note: If the system is not being installed immediately, do not remove the packaging. Store the system in an indoor, temperature-controlled area, free of conductive contaminants.




Heavy: There must be two people to roll the enclosure from the pallet.




Note: Save four bolts for attaching the stabilizing brackets to the 356 mm (14 in) enclosure. See “Stabilizing Brackets”.

Land packaging.

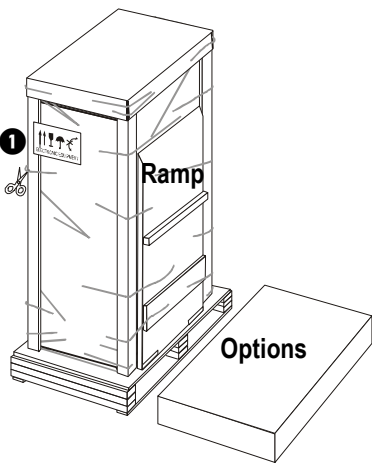


1 Cut carefully along the edges to remove the plastic and to free the ramp.

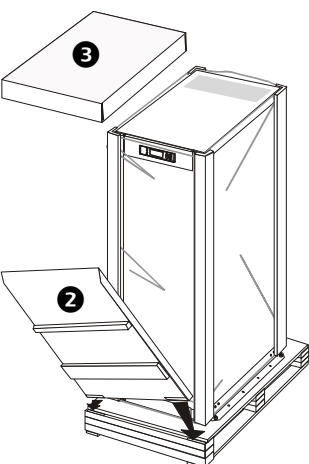


2 Place the ramp by aligning the velcro strips on the ramp with the velcro strips on the front edge of the pallet.

3 Remove the cardboard cover.

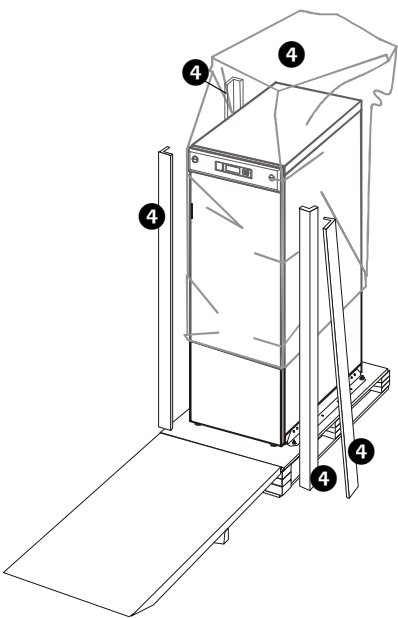


4 Remove the corner protection and the plastic bag.

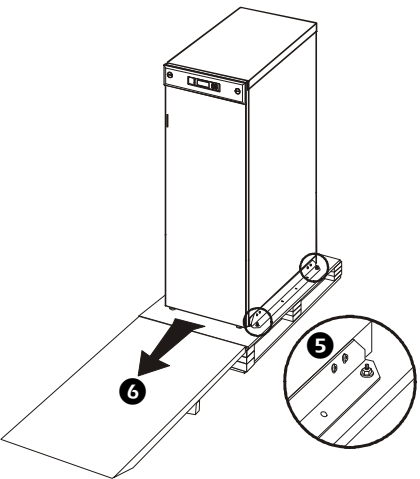


5 Remove the bolts from the brackets attaching the enclosure to the pallet and save the brackets for floor anchoring, if required.

6 Roll the unit off the pallet.

Sea packaging.

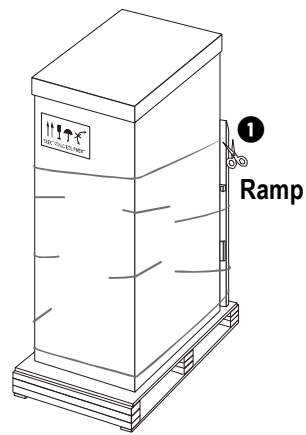


1 Cut carefully along the edges to remove the plastic and to free the ramp.

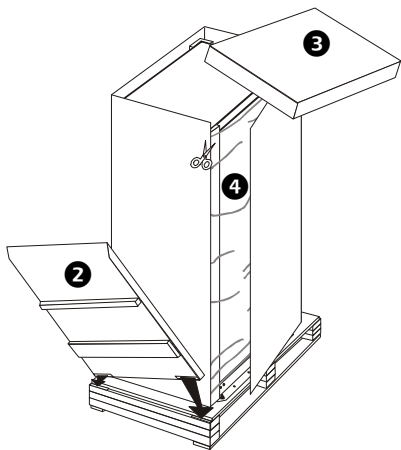


2 Place the ramp by aligning the velcro strips on the ramp with the velcro strips on the front edge of the pallet.

3 Remove the cardboard cover.

4 Cut along the edges of the cardboard cover and remove it.

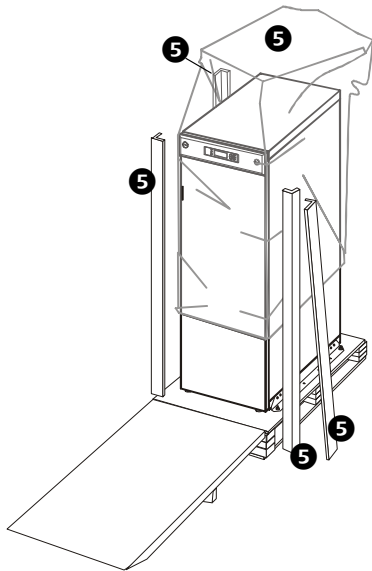

5 Remove the corner protection and the plastic bag.

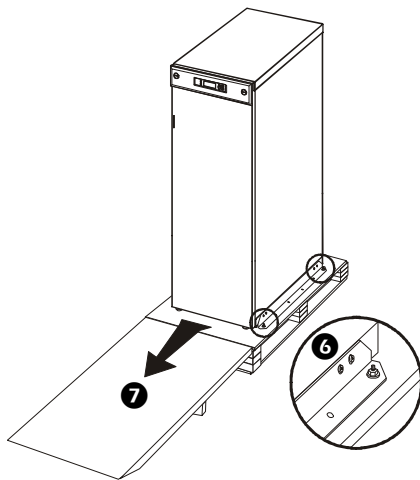

6 Remove the bolts from the brackets attaching the enclosure to the pallet and save the brackets for floor anchoring, if required.

7 Roll the unit off the pallet.

Stabilizing Brackets

Attach stabilizing brackets




Caution: After unpacking always install the stabilizing bracket (shipped with the UPS) to the 356 mm (14 in) enclosure, unless more units are placed in a row.



Note: This equipment is easily tipped. Use extreme caution when unpacking and moving the equipment to its final location.


1 Use the screws (which attached the transport brackets to the UPS) to fasten the stabilizing bracket to the UPS.

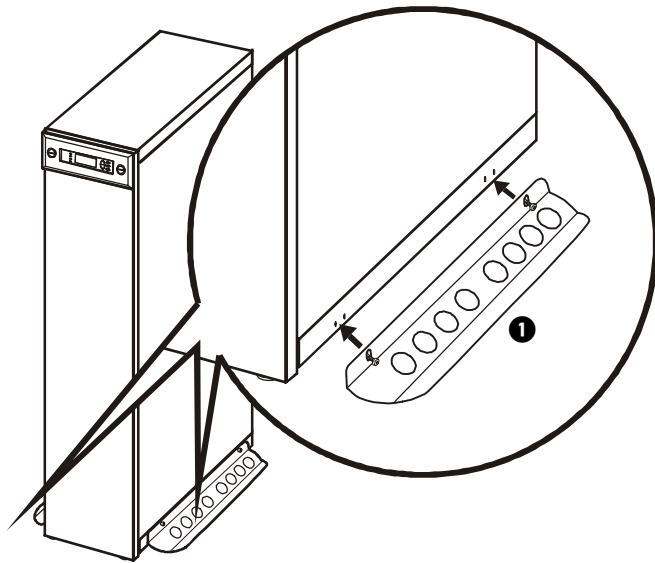

Move the UPS with stabilizing brackets

1 Loosen the screws, push the brackets upwards and tighten the screws.

2 Push the brackets downwards when the UPS is at its final position and tighten the screws.

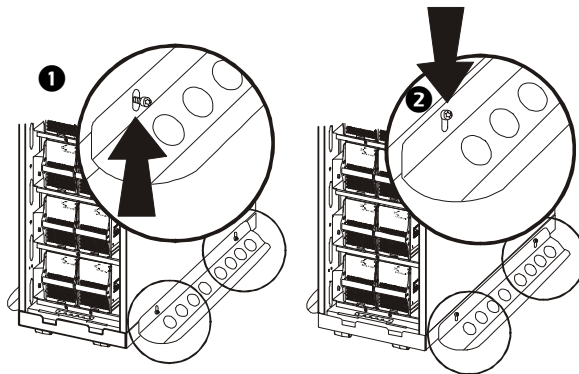

Storage Conditions

Storage temperature: -15°C to 40°C/ 5°F to 104°F	Relative Humidity: 0-95% Non-condensing	Storage place free from vibration, conductive dust, direct sunlight, and moisture.

Documentation Storage




Warning: For safety reasons, only qualified personnel is allowed to remove the front panel and perform operation and maintenance behind it.

1 Remove the front panel by turning the screw towards the display to the unlocked position.

2 Pull the upper part of the front panel free of the UPS.

3 Lift the front panel free of the two slots at the bottom of the enclosure

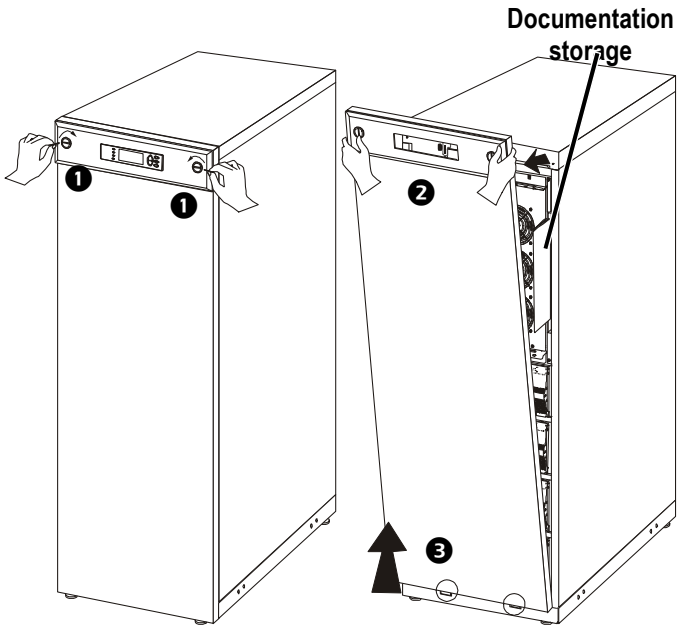

Contact Information

For local country-specific centers: go to www.apc.com/support/contact.
Web Support: support@apc.com.